

## LCD 26" (MODEL: 26K2) UPDATING PROCEDURE

**NOTE: THE FOLLOWING PROCEDURE SHOULD BE DONE ONLY WHEN LCD TV IS CONNECTED TO UPS SUPPLY, ELSE FLASH (ON MAIN BOARD) CAN BE CORRUPTED.**

**ध्यान रखे! LCD TV को अपडेट करते समय, LCD TV UPS SUPPLY के साथ लगा होना चाहिए. अन्यथा फ्लश (जो MAIN BOARD बोर्ड पर है) खराब हो सकती है.**

- 1) Delete all files from the USB flash. And copy the CHINA\_2M.BIN (as attached in this email) to the USB flash. NOTE: this file is only for the 26" LCD model 26K2.  
USB से सारी फाइल्स को डिलीट करिए. और दी गयी फाइल CHINA\_2M.BIN को USB पर कॉपी करिए.  
ध्यान रखिए की यह फाइल केवल 26" LCD (MODEL 26K2) के लिए ही है

- 2) Power OFF(mains) the LCD.  
POWER स्विच को दबा के LCD को ऑफ करिए.



- 3) Insert the USB in the LCD.  
USB को LCD में डालिए



- 4) Press (STANDBY AND PROG+) buttons together, and while pressing these 2 buttons press Power ON (mains).

"STANDBY" और "PROGRAM +" को साथ दबाते हु एपवर स्विच को ऑन करिए



- 5) If everthing is ok, then LCD will start updating and this message will come on screen.  
अगर सब ठीक है तो LCD पर यह मेसेज आएगा

a) MESSAGE 1: USB DEVICE FOUND




b) MESSAGE 2: CHIP ERASING



c) MESSAGE 3: CHIP PROGRAMMING



d) MESSAGE 4: UPDATE FINISHED. PLEASE REBOOT THE SYSTEM.

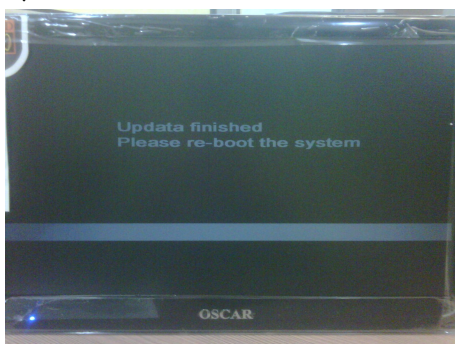

- 6) After this message, pull out the USB, and power off and power on the LCD.  
इस मेसेज के बाद USB को LCD TV से निकालिए और पाँवर OFF और पवर ON करिए.